


Recommendation and control for silent kit Ducadisc


Only for OEM clutch basket Ducati or Duacdisc , Ducabike or :




Clutch in good condition :

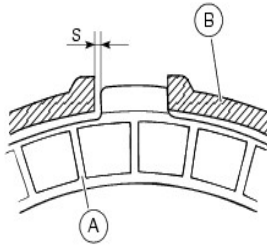

Insert the friction plate (A) in the clutch drum (B) and measure tang-to-slot clearance (S) with a feeler gauge.
The clearance "S" must not exceed **0.6 mm**.

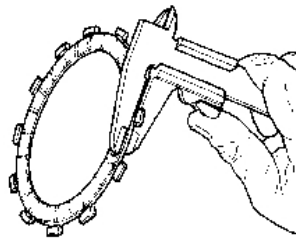

Measure the thickness of the friction plates. It should not be less than **2.8 mm**

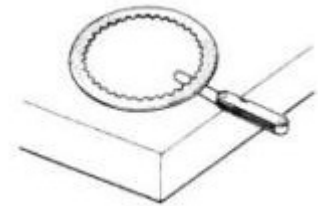

Place the plate on a flat surface and check the amount of deformation with a feeler gauge.
Max flatness error: **0.2 mm**.



COPYRIGHT
DUCA DISC